



# T-Cure Curing Box Operation Manual





# T-Cure Curing Box Description

Brand: 3DTALK

Product: Curing Box

Model: T-Cure

Machine Size: 255\*235\*350mm

Curing Size:  $\phi$ 150\*200mm

Net Weight: 4.2kg

Power Supply: 100-240VAC 50/60Hz 150W

Wavelength: 405nm

**JIANGSU OURING 3D TECHNOLOGY CO.,LTD**

+86 513 8563 2888

[www.ouring.com.cn](http://www.ouring.com.cn)

[info@ouring.com.cn](mailto:info@ouring.com.cn)





# T-Cure User Manual



## PART INFO

---

- 1** Display screen
  - 2** Knob
  - 3** Power outlet
  - 4** Switch
  - 5** Heater
  - 6** Turntable tray
  - 7** Left and right lamp
  - 8** Toplight
- 





# T-Cure User Manual


## Mode

---


- 1** Lamp: On      Temp: OFF (Default)
  - 2** Lamp: On      Temp: ON
- 

## Interface


---

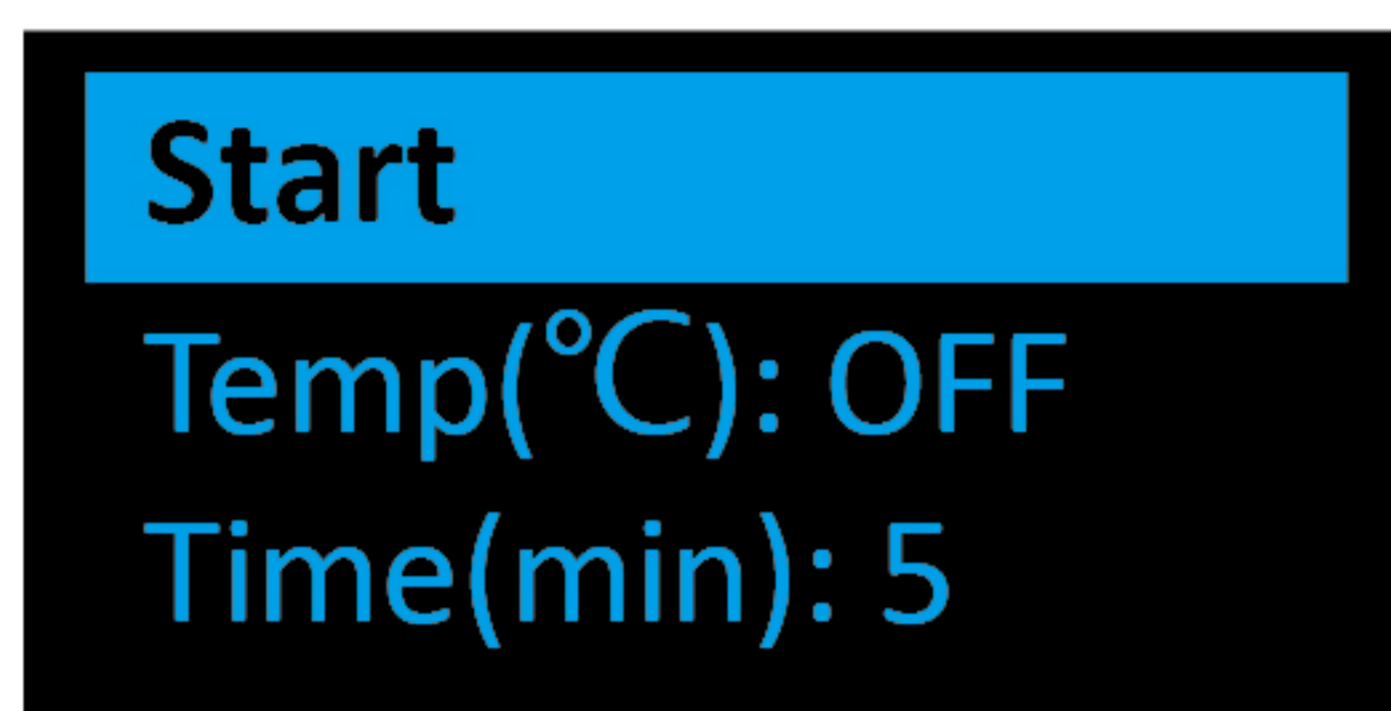

**1**

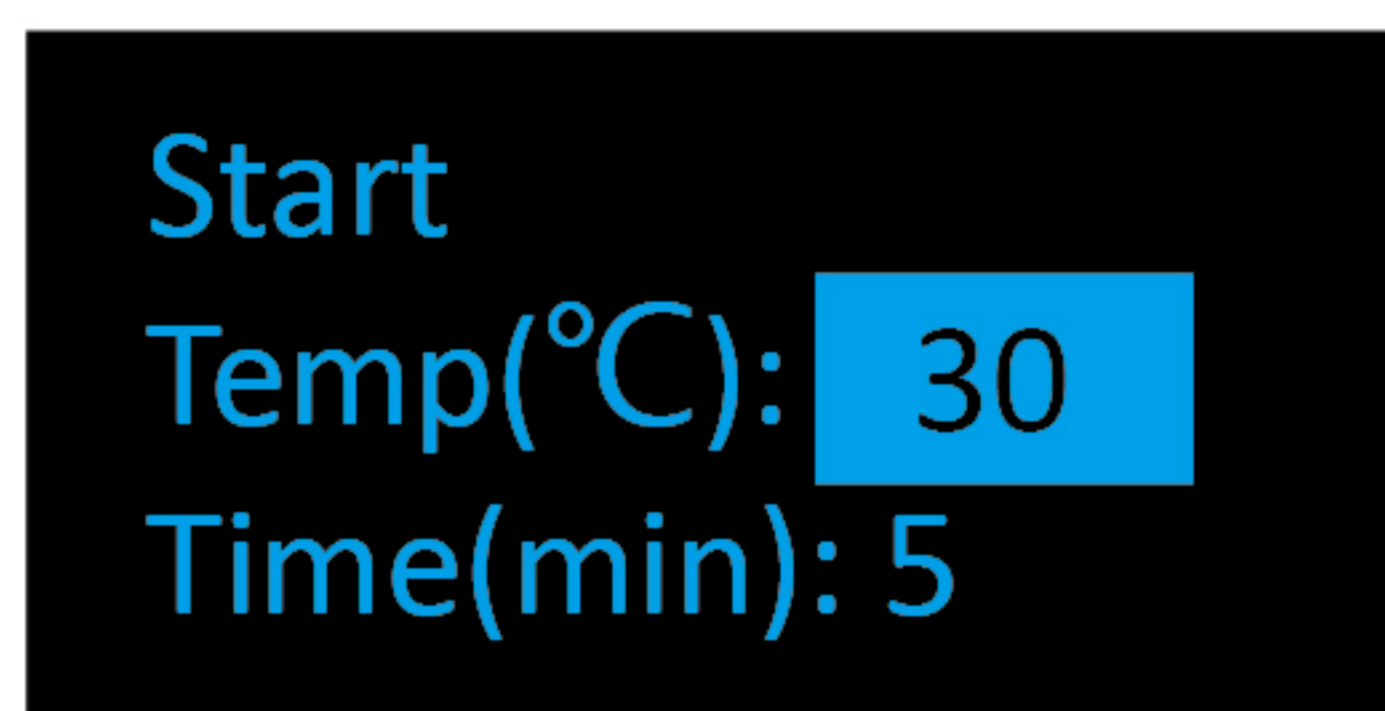


**2**

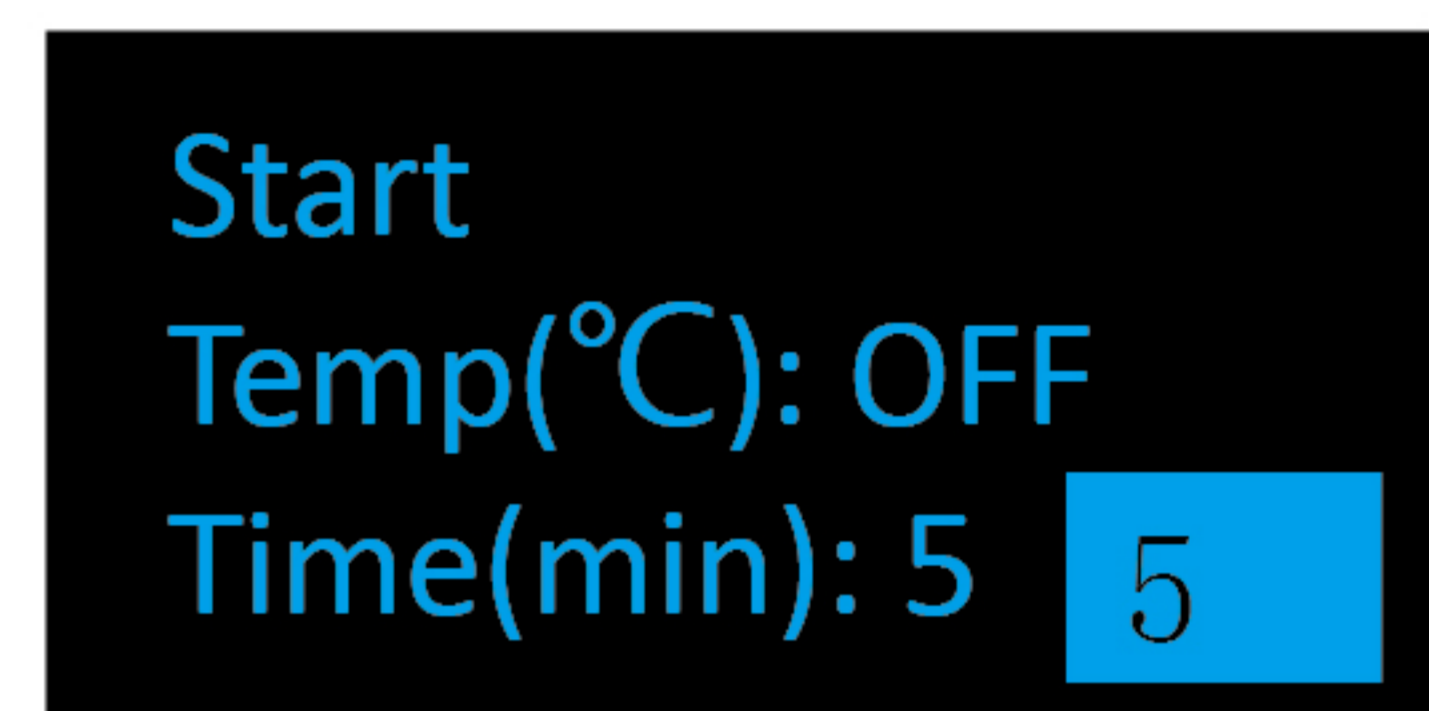


**3**



**4**

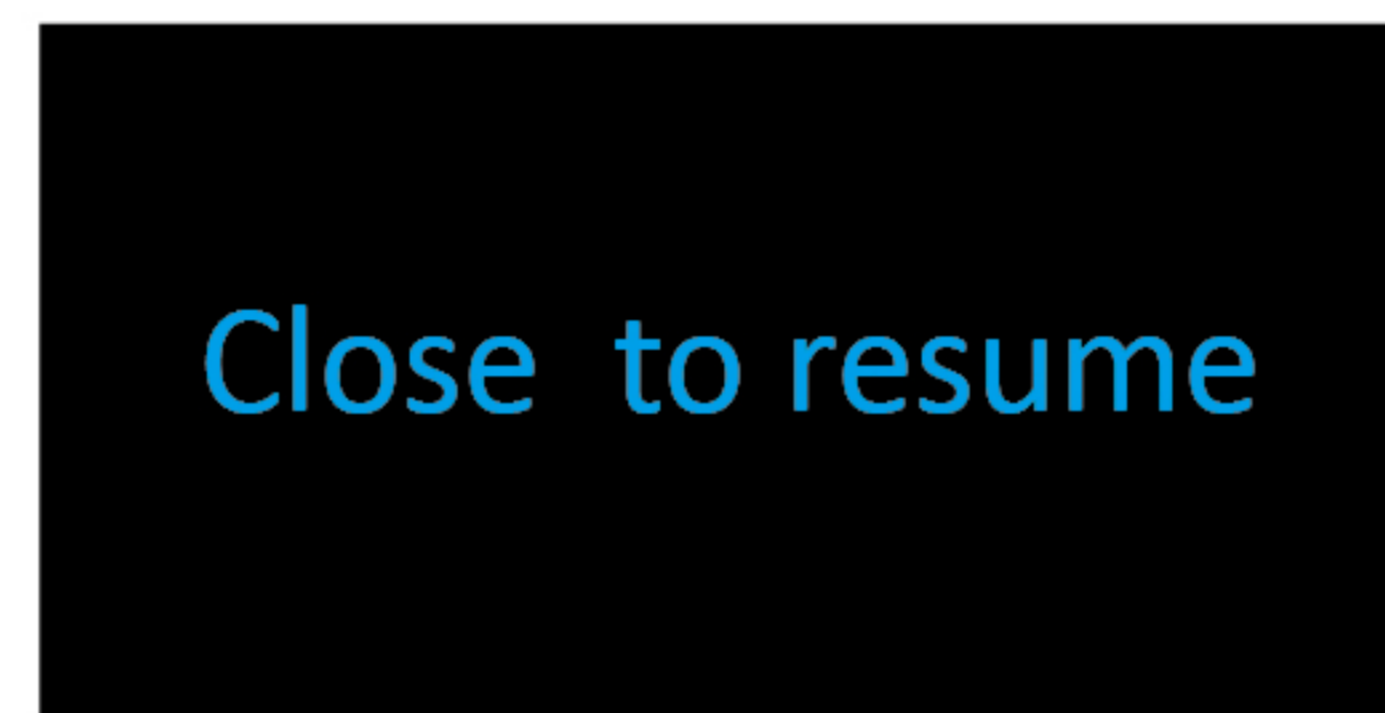

**5**

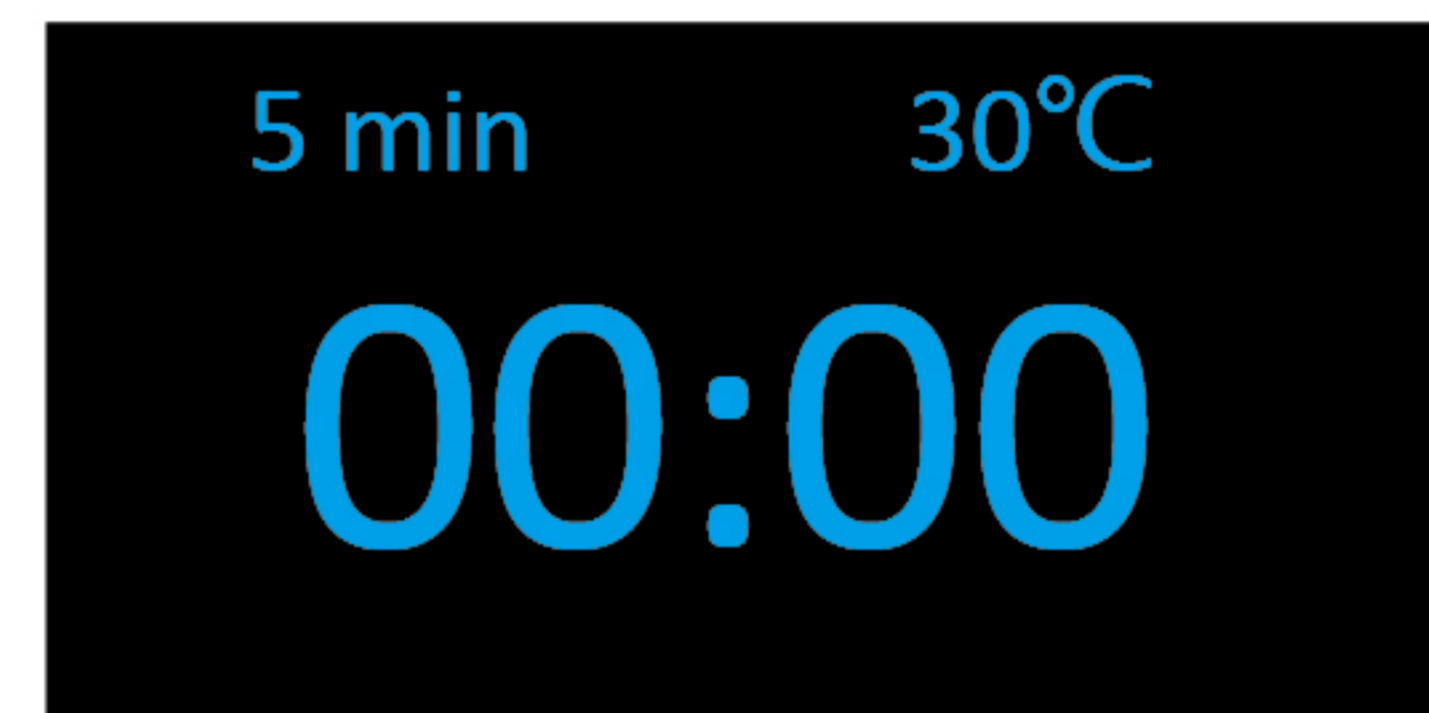

**6**

- 1** Boot up: Turn the button to start.
  - 2** Rotate the knob to menu to set temperature (20~50°C) and tap.
  - 3** Rotate the knob to menu to set curing time (1~30mins) and tap.
  - 4** Start working.
  - 5** Door opening pause, curing resume after closing the door.
  - 6** Curing complete with 4 beeps.
-