

# DIAPHRAGM GAS SAMPLING PUMPS

DATA SHEET E 059



N 0150 AP.9E



N 0150.3 AP.9E



N 0150 SP.12E Double diaphragm pump

## Concept

The diaphragm vacuum pumps from KNF are based on a simple principle – an elastic diaphragm, fixed on its edge, moves up and down its central point by means of an eccentric. In this way the medium is transferred using automatic valves.

The KNF double diaphragm system (.12) for increased safety

A second diaphragm is located underneath the working diaphragm. If gas should leak at the working diaphragm, it will still remain inside the pump space.

Thanks to the KNF modular system, the parts used to transfer the gases can be made from materials with varying degrees of resistance. The customer has a choice of pump drives ranging from a selection of motors models. Please contact us for further details. Explosion-proof pumps in ATEX see data sheet E 178.

## Features

**Pure transfer, evacuation and compression of air, gases and vapors**  
no contamination of the media due to oil-free operation

**Low maintenance**

**High level of gas tightness**

Following leakage rates are available:  
.9 corresponds to  $< 6 \times 10^{-3}$  mbar l/s  
.13 corresponds to  $< 6 \times 10^{-6}$  mbar l/s  
.12 corresponds to  $< 6 \times 10^{-6}$  mbar l/s

**Chemically resistant versions**  
are also available with the KNF double diaphragm system

**Long product life**

**Very quiet and low vibration**

**Cool running motor**  
even in continuous operation

**Can operate in any installed position**

## Areas of use

These diaphragm pumps for analysis and process gases offer a high level of performance despite their small size, as well as an excellent price performance ratio. They are used especially in the fields of chemical, environmental, energy and production technology.

Pumps with the KNF double diaphragm system (.12) are employed for expensive, toxic and dangerous gases. Double diaphragm pumps in ATEX for potentially explosive atmospheres on request. Please contact us for details.

## PERFORMANCE DATA

Type	Delivery (l/min)	Vacuum (mbar absolute)	Pressure (bar g)	Weight incl. 3 ~ / 1 ~ motor (kg)
N 0150 AP.9E	130	120	1	40.5 / 34.5
N 0150 SP.9E	130	120	1	46.5 / 40.5
N 0150 SP.13E	130	120	1	46.5 / 40.5
N 0150 ST.9E	100	130	1	46.5 / 40.5
N 0150 ST.13E	100	130	1	46.5 / 40.5
N 0150.3 AP.9E	130	25	-	46.5 / 41.5
N 0150.3 SP.9E	130	25	-	58.5 / 53.5
N 0150.3 SP.13E	130	25	-	58.5 / 53.5
N 0150.3 ST.9E	100	30	-	58.5 / 53.5
N 0150.3 ST.13E	100	30	-	58.5 / 53.5
N 0150 SP.12E	130	120	1	48.5 / 43.0
N 0150.3 SP.12E	130	25	-	63.5 / 58.5

# N 0150 \_ \_ \_ E

## PERFORMANCE DATA

Type	Delivery at atm. pressure (l/min) <sup>1)</sup>	Max. operating pressure (bar g)	Ultimate vacuum (mbar abs.)
N 0150 AP.9E	130	1	120
N 0150 SP.9E	130	1	120
N 0150 SP.13E	130	1	120
N 0150 ST.9E	100	1	130
N 0150 ST.13E	100	1	130

<sup>1)</sup> Liter at STP


## MOTOR DATA

Protection class	IP 55	IP 55
Voltage (V)	230	3~ 230/400
Frequency (Hz)	50	50
Power P <sub>1</sub> (kW)	0.9	0.9
I <sub>max</sub> (A)	6.6	6.1/3.5


## PUMP MATERIAL

Type	Pump head	Diaphragm	Valves
N 0150 AP.9E	Aluminum	EPDM	Stainless steel
N 0150 SP.9E	Stainless steel	EPDM	Stainless steel
N 0150 SP.13E	Stainless steel	EPDM	Stainless steel
Chemically resistant version			
N 0150 ST.9E	Stainless steel	PTFE-coated	Stainless steel
N 0150 ST.13E	Stainless steel	PTFE-coated	Stainless steel


# N 0150 \_ \_ \_ E

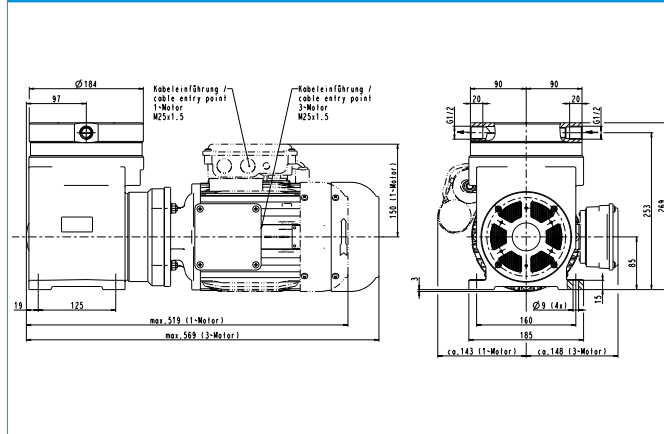

## N 0150 AP.9E | N 0150 SP.9E | N 0150 SP.13E

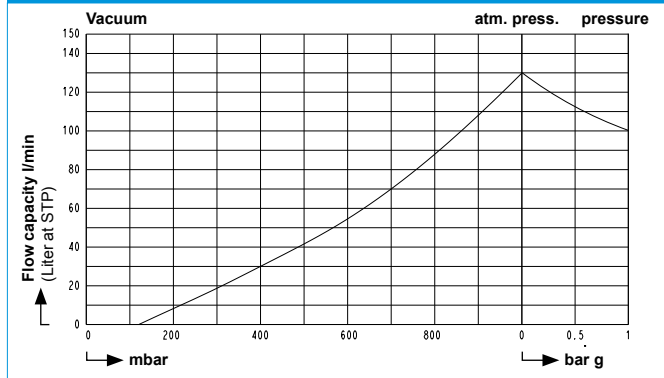

## N 0150 ST.9E | N 0150 ST.13E

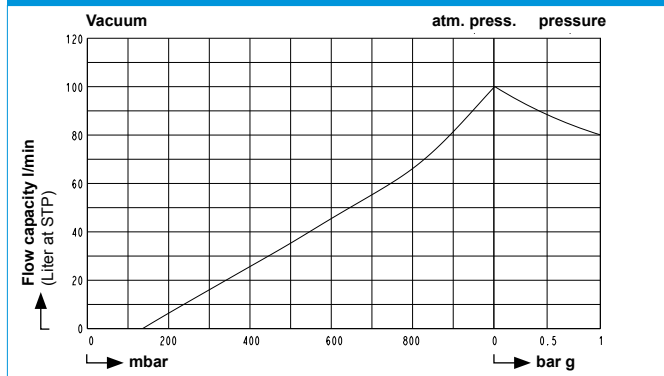

# N 0150.3 \_ \_ \_ E

## PERFORMANCE DATA

Type	Delivery at atm. pressure (l/min) <sup>1)</sup>	Max. operating pressure (bar g)	Ultimate vacuum (mbar abs.)
N 0150.3 AP.9E	130	-	25
N 0150.3 SP.9E	130	-	25
N 0150.3 SP.13E	130	-	25
N 0150.3 ST.9E	100	-	30
N 0150.3 ST.13E	100	-	30


## MOTOR DATA

Protection class	IP 55	IP 55
Voltage (V)	230	3~ 230/400
Frequency (Hz)	50	50
Power P <sub>1</sub> (kW)	1.0	0.9
I <sub>max</sub> (A)	7.3	6.1/3.5


## PUMP MATERIAL

Type	Pump head	Diaphragm	Valves
N 0150.3 AP.9E	Aluminum	EPDM	Stainless steel
N 0150.3 SP.9E	Stainless steel	EPDM	Stainless steel
N 0150.3 SP.13E	Stainless steel	EPDM	Stainless steel
Chemically resistant version			
N 0150.3 ST.9E	Stainless steel	PTFE-coated	Stainless steel
N 0150.3 ST.13E	Stainless steel	PTFE-coated	Stainless steel


# N 0150.3 \_ \_ \_ E

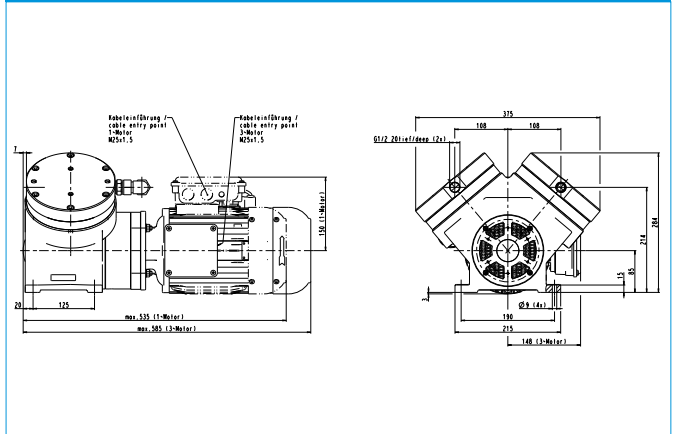

## N 0150.3 AP.9E | N 0150.3 SP.9E | N 0150.3 SP.13E

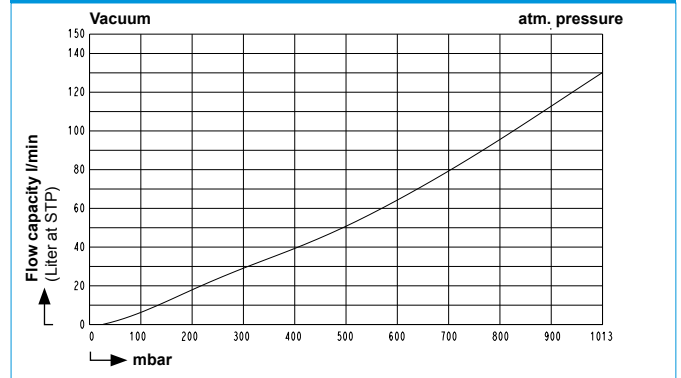





## N 0150.3 ST.9E | N 0150.3 ST.13E

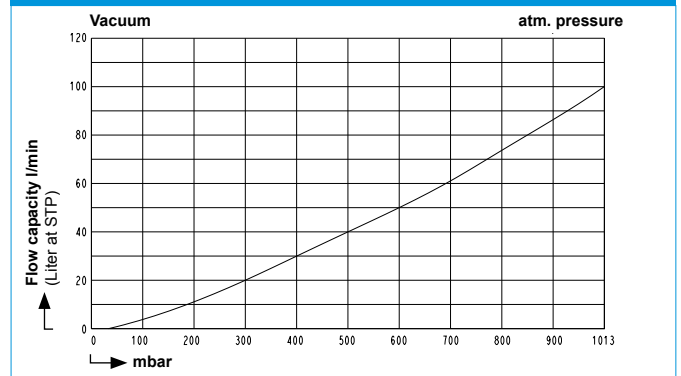



# TECHNICAL INFORMATION

## PUMP DOWN TIME 20 LITER VESSEL

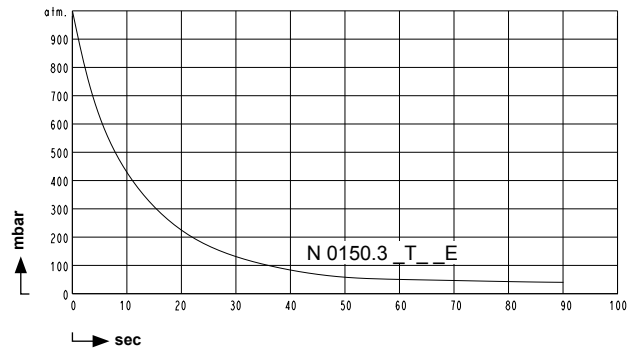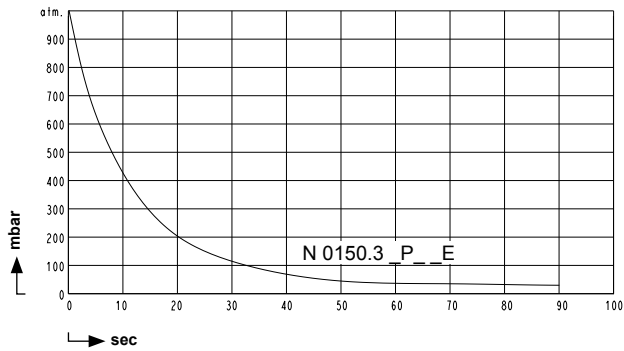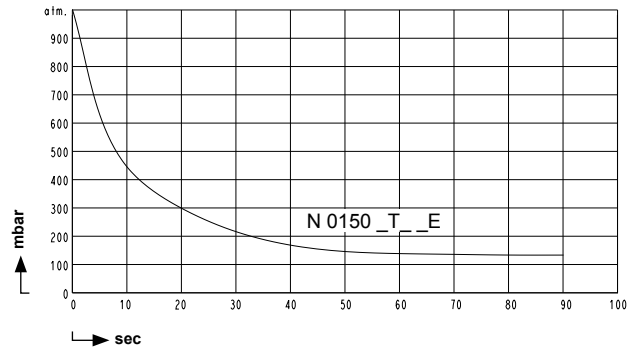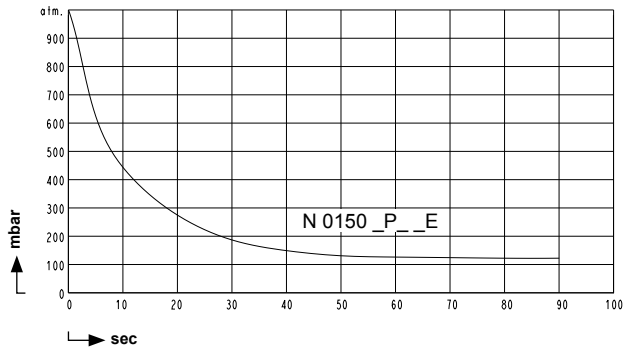

## ACCESSORIES


Description	Order No.	Details
Silencer	046104	G 1/2
Wrench for retainer plate	018816	
Foot plate with shock mounts	304463	
Water cooling (only in combination with stainless steel heads)		
N 0150 / N0150_...-12	305998	
N 0150.0 (double-head pump)	306765	
N 0150.0 (double-head pump) .12	306766	

# HINTS ON FUNCTION AND INSTALLATION

## Function of KNF diaphragm vacuum pumps and compressors

An elastic diaphragm is moved up and down by an eccentric (see illustration). On the down-stroke it draws the air or gas being handled through the inlet valve. On the up-stroke the diaphragm forces the medium through the exhaust valve and out of the head. The compression chamber is hermetically separated from the drive mechanism by the diaphragm. The pumps transfer, evacuate and compress completely oil-free.

## Diaphragm pump

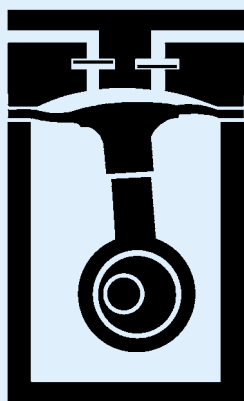

## The KNF double diaphragm system for increased safety

A second diaphragm is located underneath the working diaphragm. This second diaphragm is under less mechanical stress when the pump is operating. If gas should leak at the working diaphragm, it will still remain inside the pump space. The space between both diaphragms can be monitored so that any damage to the working diaphragm will be noted immediately.

Pumps with the KNF double diaphragm system are employed for expensive, toxic and dangerous gases.

## Double diaphragm pump



## Hints on installation and operation

- Range of use: Transferring air and gases at temperatures between +5 °C and +40 °C.
- Use chemically resistant versions for aggressive gases and vapors.
- Permissible ambient temperature: between +5°C and +40°C.
- The standard pumps are not suitable for use in areas where there is a risk of explosion. In these cases there are other products in the KNF program – please ask us for details.
- To prevent the maximum operating pressure being exceeded, restriction or regulation of the gas flow should only be carried out in the suction line.
- Components connected to the pump must be designed to withstand the pneumatic performance of the pump.
- Install the pump so that the fan can draw in sufficient cooling air
- Fit the pump at the highest point in the system, so that condensate can not collect in the head of the pump.

**KNF Neuberger GmbH**  
Alter Weg 3  
D 79112 Freiburg  
Tel. +49 7664 5909 0  
Fax +49 7664 5909 99  
info@knf.de  
www.knf.de

# YOUR LOCAL PARTNER AROUND THE WORLD

## KNF SALES ORGANIZATION

**Australia** KNF Regional Office  
Moreland West VIC 3055  
Tel. +61 3 9386 4959  
info@knf.com.au  
www.knf.com.au

**Benelux Netherlands** KNF Verder B.V.  
3451 GG Vleuten  
Tel. +31 30 677 92 40  
info@knf-verder.nl  
www.knf-verder.nl

**Benelux Belgium and Luxemburg**  
KNF Verder N.V.  
2630 Aartselaar  
Tel. +32 3 871 96 24  
info@knf.be  
www.knf.be

**China** KNF Technology (Shanghai) Co., Ltd.  
Shanghai 201203  
Tel. +86 21 5109 9695  
info@knf.com.cn  
www.knf.com.cn

**France** KNF Neuberger SAS  
68128 Village-Neuf  
Tel. +33 389 70 35 00  
info@knf.fr  
www.knf.fr

**Germany** KNF Neuberger GmbH  
79112 Freiburg  
Tel. +49 7664 5909 0  
info@knf.de  
www.knf.de

**India** KNF Pumps + Systems (India) Pvt. Ltd.  
Hinjewadi Pune 411 057  
Tel. +91 20 640 13 923  
info@knfpumps.in  
www.knfpumps.in

**Italy** KNF Italia S.r.l.  
20063 Cernusco s. Naviglio (MI)  
Tel. +39 02 929 04 91  
info@knf.it  
www.knf.it

**Japan** KNF Japan Co. Ltd.  
Tokyo 104-0033  
Tel. +81 3 3551 7931  
info@knf.co.jp  
www.knf.co.jp

**Korea** KNF Neuberger Ltd.  
135-502 Seoul  
Tel. +82 2 959 0255  
knf@knfkorea.com  
www.knfkorea.com

**Latin America** KNF Regional Office  
Tel. +1 609 649 1010  
gb@knf.com  
www.knf.com/es

**Morocco, Tunisia, Algeria**  
KNF Neuberger SAS  
68128 Village-Neuf  
Tel. +33 389 70 35 00  
info@knf.fr  
www.knf.fr

**Singapore** KNF Regional Office  
Tel. +65 9722 1994  
info@knf.com.sg  
www.knf.com.sg

**Sweden, Finland, Denmark, Norway**  
KNF Neuberger AB  
117 43 Stockholm  
Tel. +46 8 744 51 13  
info@knf.se  
www.knf.se

**Switzerland** KNF Neuberger AG  
8362 Balzerswil  
Tel. +41 71 973 99 30  
knf@knf.ch  
www.knf.ch

**UK, Ireland** KNF Neuberger U.K., Ltd.  
Witney, Oxfordshire OX28 4FA  
Tel. +44 1993 77 83 73  
info@knf.co.uk  
www.knf.co.uk

**USA, Canada** KNF Neuberger, Inc.  
Trenton, NJ 08691-1810  
Tel. +1 609 890 8600  
knfusa@knf.com  
www.knfusa.com

## KNF PRODUCT CENTERS

**Gas Pumps** KNF Neuberger GmbH  
DE-79112 Freiburg  
info@knf.de  
www.knf.de

**Micro Gas Pumps** KNF Micro AG  
CH-6260 Reiden  
info@knf-micro.ch  
www.knf-micro.ch

**Liquid Pumps** KNF Flodos AG  
CH-6210 Sursee  
info@knf-flodos.ch  
www.knf-flodos.ch