



T-Cure Pro Curing Box Operation Manual



T-Cure Pro Curing Box

Brand: 3DTALK

Product: Curing Box

Model: T-Cure Pro

Machine Size: 470*360*460mm

Curing Size: 330*210*280mm

Net Weight: 17kg

Power Supply: 100-240VAC 50/60Hz 150W

Wavelength: 405nm

JIANGSU OURING 3D TECHNOLOGY CO.,LTD

+86 513 8563 2888

www.ouring.com.cn

info@ouring.com.cn




T-Cure Pro User Manual

PART INFO



- 1 Display screen
- 2 Knob
- 3 Power
- 4 Switch
- 5 Curing lamp (10units)
- 6 Curing
- 7 Fan

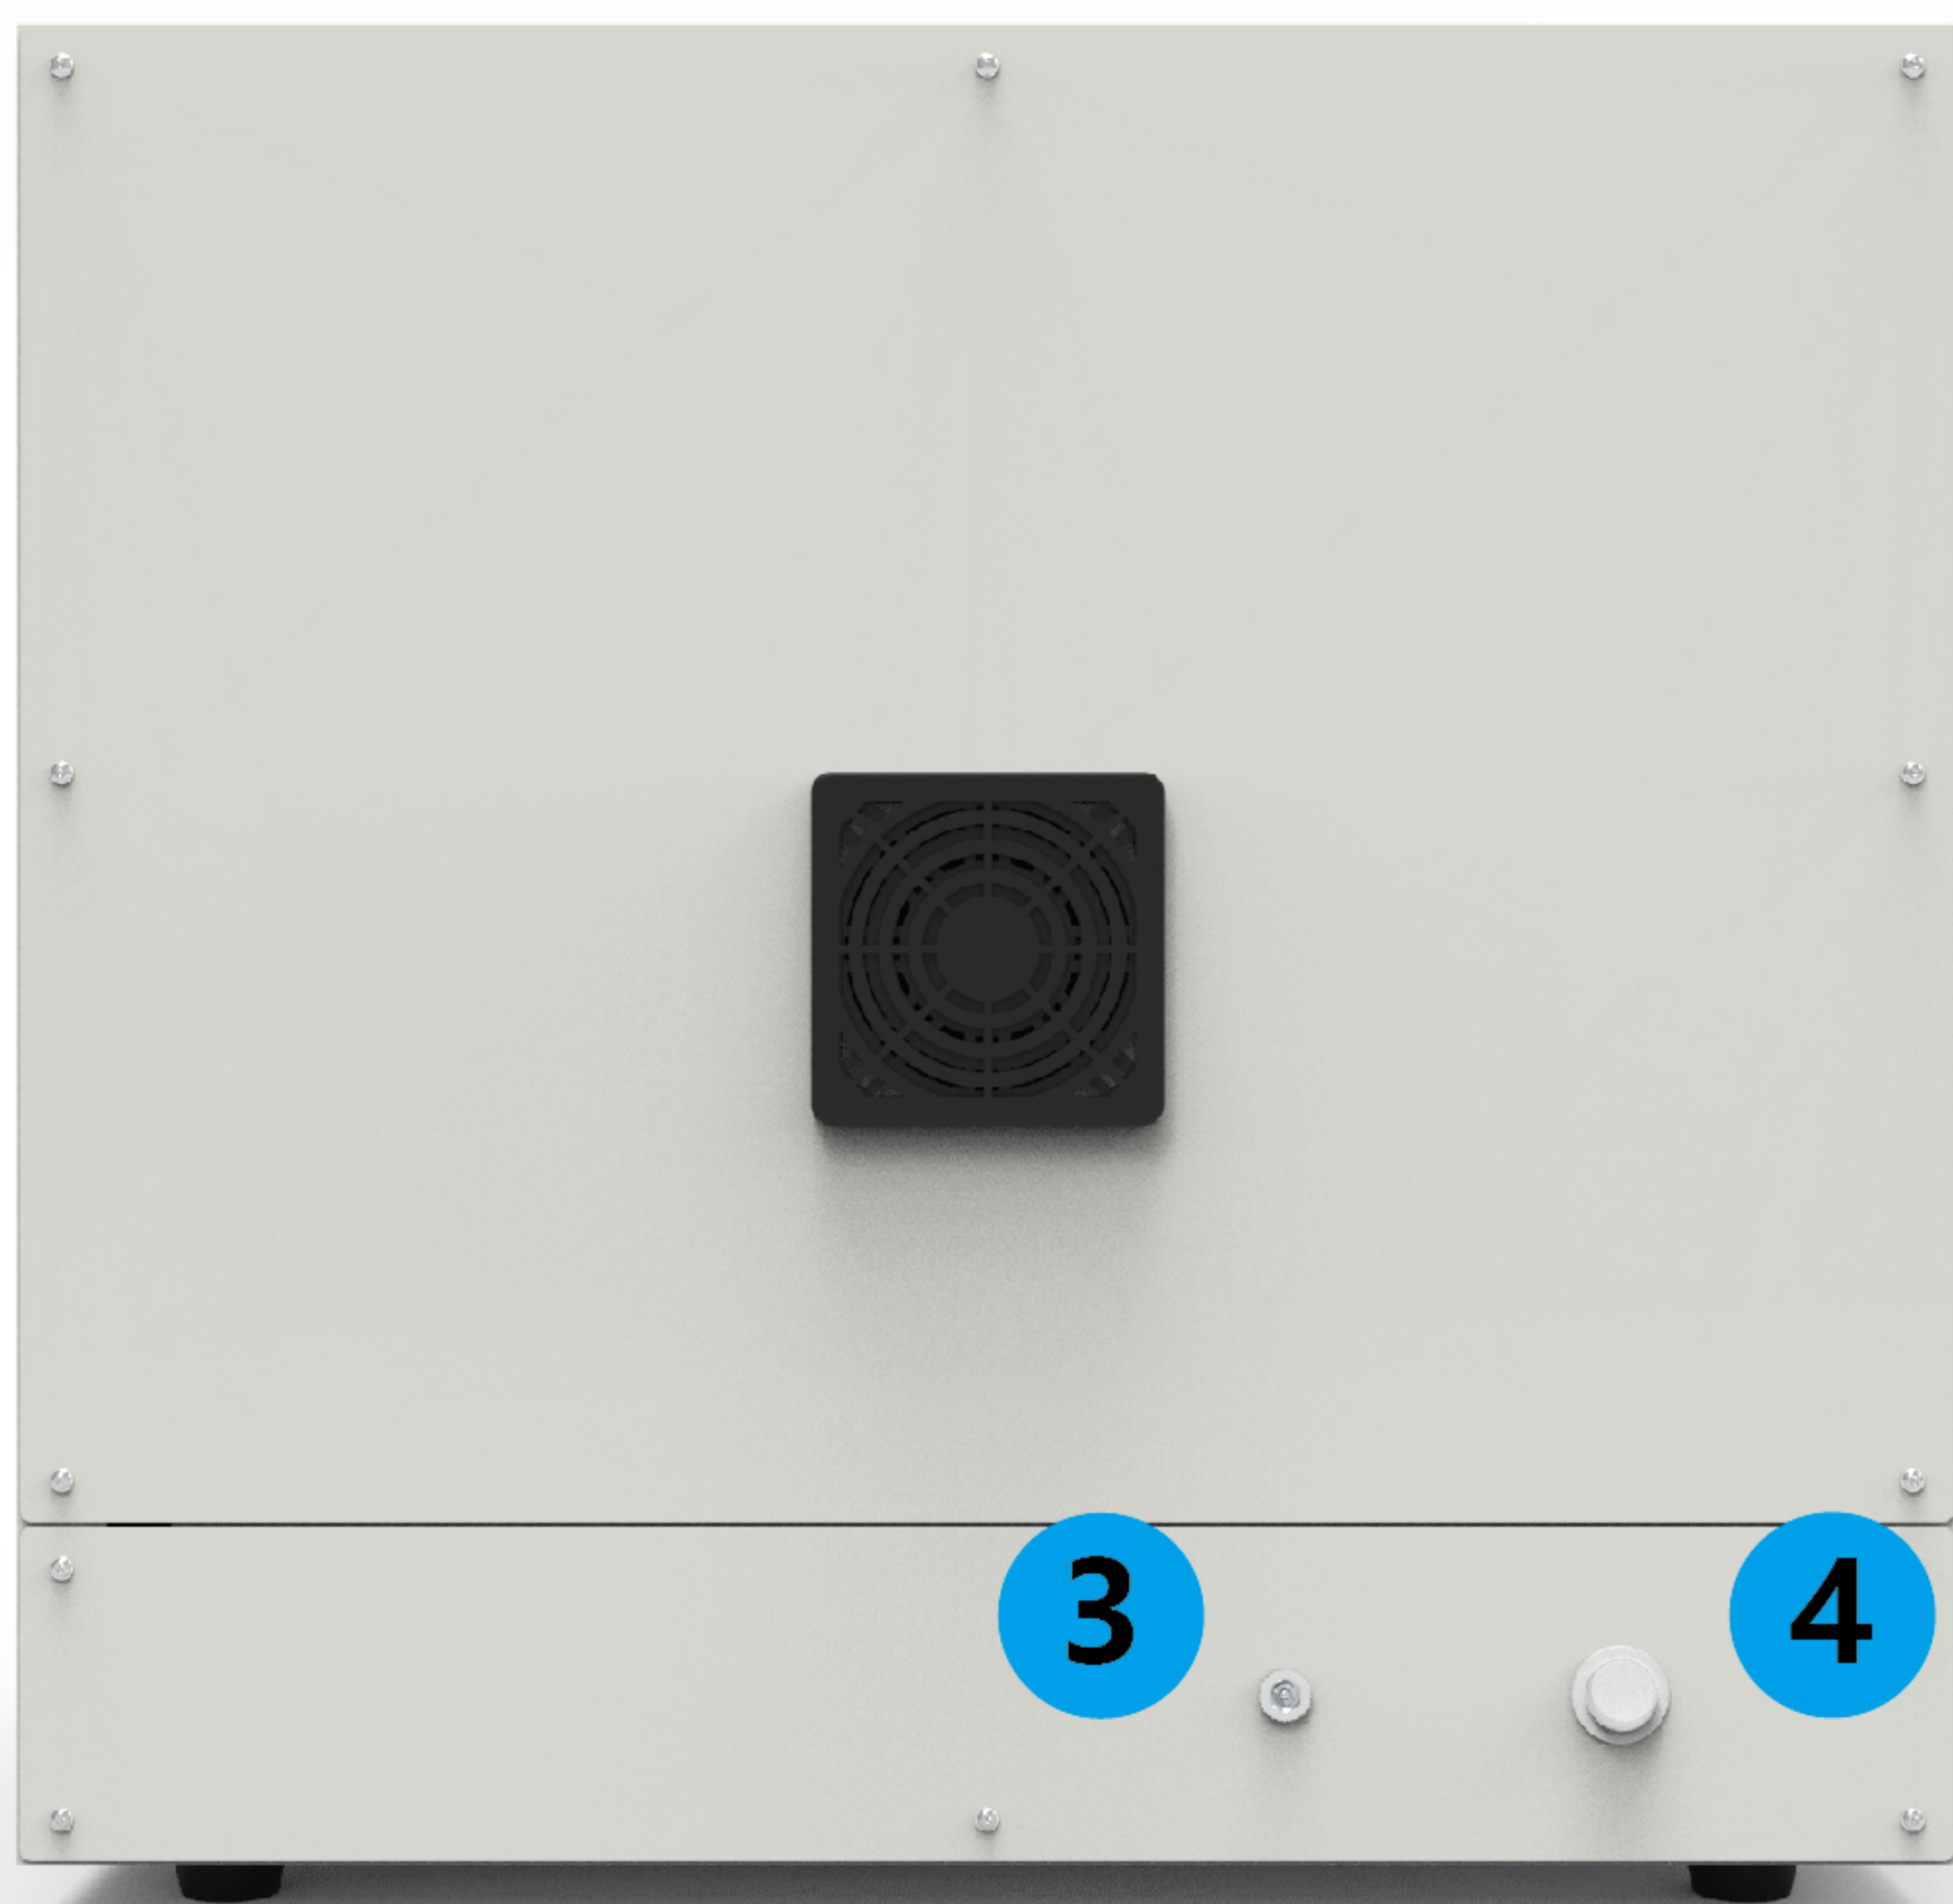

T-Cure Pro User Manual

Interface



- 1** Boot up: Turn the button to start.
 - 2** Rotate the knob to menu to set curing time (1~30mins) and tap.
 - 3** Start working.
 - 4** Door opening pause, curing resume after closing the door.
 - 5** Curing complete with 4 beeps.
-